

- Works with any Intel Core Duo as well as all VIA or AMD processors.

Firmware on the M4-ATX can be changed to accommodate different behaviours. OEM / reseller integration is welcome Please send en email to <u>oem-queries@mini-box.com</u> with your custom requirements.

1. M4ATX System Tray Monitor & Setup Application

This install kit provides two applications. M4ATXTray.exe which allows monitoring the M4ATX power supply voltages and temperature (needs to be connected thru a USB cable to the computer). The application adds a small icon on windows system tray which on mouse over displays the voltages and temperature, and can be customized with several skins. Download M4ATX System Tray Monitor & Application

See below for some example skin screenshots.

Vin: 14.71V Vign: 14.49V Rails: 3.33V 5.06V 12.26V Temperature: 22*C	<ul> <li>≶ V(in): 14.71∨</li> <li>⊶ V(ign): 14.49∨</li> <li>ź Rails:</li> <li>3.33∨ 5.06∨ 12.26∨</li> <li>▲ Temperature:24°C</li> </ul>
EN < 🙀 🗾 1:41 PM	EN < 🙀 🗾 1:42 PM

The second application M4\_ATX.exe allows to setup various parameters of the power supply like ignition voltage limit or shutdown voltage limit.

44	Voltage In:	14.71	[V]	Voltage 3V:	3.33	۷]
	Ignition:	14.49	[V]	Voltage 5V:	5.06	[V
	Temperature:	24	[°⊂]	Voltage 12V:	12.26	[V
inition HIGH	imit	-	5.95	[٧]		Send
ove this volt	age IGN is conside:	red ON				

## 2. M4ATX OEM Setup Application

Download M4ATX OEM Setup Application

WARNING: This program is intended only for OEM or Advanced Users. Mini-Box.com cannot be held responsible for any damage that might come from the use of this software done to your power supply or other computer components Application allows advanced setup of M4ATX parameters.

## 3. Linux/MacOS/\*BSD Api

Download m4api.tar.gz

updated versions can be found in the Git repository at the Robotics @ Maryland website.

## Examples

```
# Monitor input and output voltage levels:
$ ./m4 -diag loop
-- 1262486581
VIN: 11.34
IGN: 11.23
33V: 3.33
5V: 5.06
12V: 12.18
TEMP: +28
-- 1262486582
VIN: 11.34
IGN: 11.34
. . .
# Display your PSU's configuration:
$ ./m4 -config
IGN HIGH: 5.84 V
IGN_LOW: 5.50 V
IGN_DBC: 500 ms
PSU DELAY: 1 sec
. . .
# Check or update specific variables:
$ ./m4 -config VIN_MIN_ON
9.55 V
$ ./m4 -config VIN_MIN_ON 10.0
$ ./m4 -config VIN_MIN_ON
9.99 V
```

